

Dometic® M-Series Pump Duckbill Valve Instructions


To Inspect:

1. Flush the pump with fresh water and disinfectant.
2. Close the maintenance valves (if installed) in the inlet and outlet piping.
3. Turn off/disconnect electrical source to the pump motor.
4. Disassemble the inlet/outlet flanges, elbows, and valve housings.
5. Remove the four (4) duckbill valves. Replace all valves if any appear to be swollen, out of shape, torn, scuffed, slit or show any other sign of wear.

CAUTION: Be sure to use black duckbill valves (part number 385311581) for all sewage applications.
Use red duckbill valves made of nitrile (part number 385311582) for oil-contaminated water applications.

To Install:

1. Insert the two (2) inlet valves pointing toward the pump body.
2. Insert the two (2) outlet valves pointing away from the pump body.

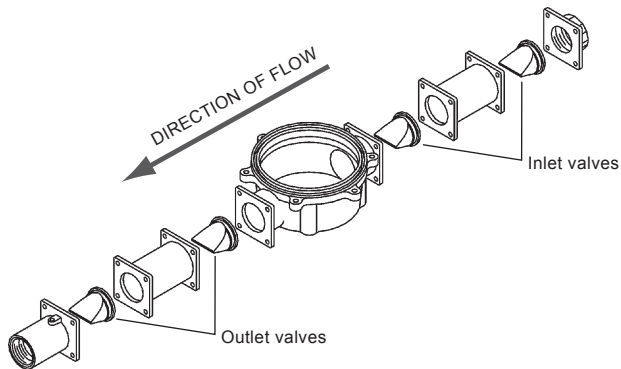

Dometic Corporation
Sanitation Division

13128 State Rt. 226

P.O. Box 38

Big Prairie, OH 44611 USA

1-800-321-9886

Fax: 330-496-3097

www.Dometic.com

REVISION A

Form No. 600345926 11/17

©2017 Dometic Corporation