

DOMETIC UK BLIND SYSTEMS LTD.



# MEASURING & INSTALLATION

ALL THE INFORMATION YOU NEED TO CORRECTLY MEASURE  
FOR AND INSTALL YOUR DOMETIC ELECTRIC BLINDS



 **DOMETIC**



# MEASURING GUIDANCE

PAGE 4



# INSTALLATION GUIDANCE

PAGE 5



# MANUFACTURED TO FIT


**FOLLOW OUR USEFUL GUIDE TO ENSURE  
THE PERFECT FIT FOR YOUR NEW SHADING SOLUTIONS**

Measuring for your blinds couldn't be simpler. Use this guide along with the product Customer Order Form, available under the "Documents" tab on each product page, to get the best fit. Our

top tips and guidance will ensure you're fully prepared to install the blinds correctly, covering everything from power supply to radio and wire controlled blind requirements.

# MEASURING

Use the same techniques for measuring as you would for a manual blind and leave the rest to us. We account for headbox size, motors and accessories in our design process, ensuring you get the perfect fit every time. If you are ever unsure, or for large projects or complex blinds, Dometic would always recommend using our specialist team of highly qualified surveyors.

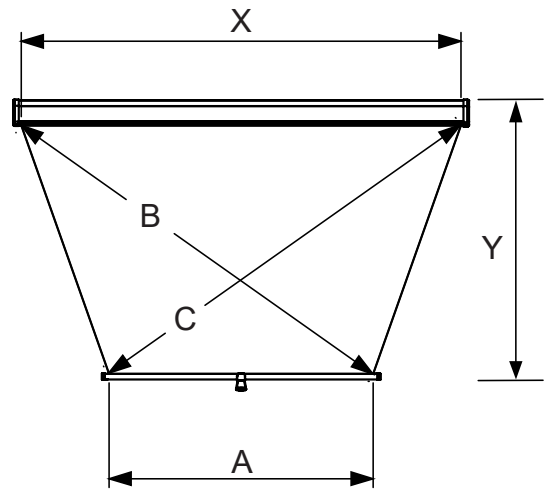

## GUIDANCE

- Define where your blind will be positioned and mark any corners with a pencil on masking tape, before commencing measurements
- If you are measuring a rectangle, ensure the window is not tapered, by taking 2 or 3 measurements along the X and Y dimensions
- Always measure to the nearest mm - Don't round up to nearest CM
- Be clear on whether your measurements are for your blind or recess it needs to be fitted into
- Define if your blind will be top or face fixed
- Note which side of the headrail you would like your wire exit point to be located



# INSTALLING

Dometic would always recommend using a qualified installer to fit non-retrofit items such as powered blinds; we provide our own, highly qualified installation team for this purpose. Our installers are highly experience with working with integrators and installing powered blinds, taking the worry out of the process.



## GUIDANCE

- Note the full Job ID found on the packaging label for future correspondence
- Always check you have the correct blind before opening, measurements can be found on the label
- If you have more than one blind, you will have given us a blind location and window ID number. Please check that these match your records to ensure you install the correct blind into the correct aperture
- Ensure that the thickness of the boat structure at the proposed mounting position is deep enough to prevent the fixing screws from breaking through. If necessary, use shorter fixing screws
- Use masking tape on the drill bit as a depth guide to avoid drilling too deep

## POWER SUPPLY

Always ensure that the correct power supply is available and check before this is connected. This can be either 12 / 24 V DC, or 110 / 230 V AC. The DC supply must be a stabilised supply so that it remains constant, and AC supplies must be connected by a qualified technician.

## WIRE CONTROLLED BLINDS

Do not connect more than ONE mains powered motor to a switch. For Skysol blinds with a TM24 motor, do not connect the three control wires together as this will put the blind into programming mode.

## RADIO CONTROLLED BLINDS

- When in user mode only press one of the three control buttons on the Transmitter at a time. If you press UP & DOWN at the same time the blind can go into programming mode (dependant on motor type)
- Only programme one blind at a time and ensure only this one blind has power
- If the blind does not respond to an instruction from the transmitter, check power is going to the blind, and that the red light on the transmitter lights. Hold the transmitter close to the blind in case the batteries are nearly run down in the transmitter
- If a receiver is moved from one blind to another, and if a run time for the blind has been set on it, it will need to be re-set for the new blind
- When pairing a receiver to a transmitter only hold the prog button down on the receiver long enough for just one jog. If you repeat the pairing process, then the receiver and transmitter will become un-paired

Mobile living made easy.



---

**DOMETIC UK BLIND SYSTEMS LTD**

Atlantic House, 1 Ellis Square  
Selsey, Chichester, PO20 0AY  
Tel +44 (0) 1243 606909  
Mail [blindsystems@dometic.com](mailto:blindsystems@dometic.com)

**DOMETIC US BLIND SYSTEMS**

91 Manchester Valley Road  
Building E, Vermont 05255  
Tel +1 802 362 5258  
Mail [blindsystems@dometic.com](mailto:blindsystems@dometic.com)